

Door Locks

n Locking the vehicle from inside



► Inside lock button

- 1 Locks
- 2 Unlocks



► Door lock switch

Operates all door locks.

- 1 Locks
- 2 Unlocks

n Locking the vehicle from outside

Using the entry function or wireless remote control (→P.14, 15)


n Rear door child-protector lock



Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Power Windows

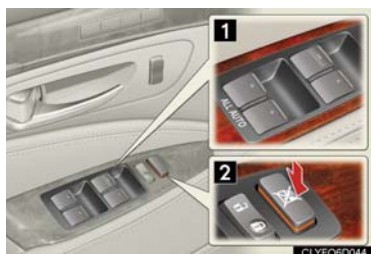

1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

Moon Roof

n Opening and closing



1 Opens

The moon roof stops slightly before the fully open position.

To fully open, press the switch again.

2 Closes

n Tilting up and down



1 Tilts up

2 Tilts down

Fuel Tank Cap



- 1 Press the fuel filler door opener.
Refueling will be possible when a message on the multi-information display indicates that the door fuel filler door has opened.



- 2 Slowly remove the cap by turning it counter-clockwise.
After the cap is removed, it can be hung on the inside of the fuel filler door.

Hood



- 1 Pull the hood release lever.



- 2 Insert your fingers under the hood, pull the hood catch and lift the hood.

Trunk

n Opening the trunk



► Trunk opener

To open the trunk from inside the cabin, simply press the trunk opener.

The trunk lid automatically opens fully.



To disable the trunk opener, turn off the main switch in the glove box.

1 On

2 Off

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

► Entry function and wireless remote control (→P:14, 15)

n Trunk easy closer

If the trunk lid is left slightly open, it will close automatically.

n Trunk closer switch



Pressing the switch closes the trunk lid automatically.